

BEARINGS -

A TYPE - B TYPE - B PARALLEL TYPE - C TYPE - D TYPE - E TYPE - F TYPE



Bearing Cup



Bearing Cup



Bearing Cone



Bearing Cone

BEARING TYPE	PART NUMBER
A TYPE BEARINGS	
A OUTER CUP - LM 11910	900-508
A OUTER CONE - LM 11949	900-509
COMPLETE - A OUTER BEARING	900-510
A INNER CUP - LM 67010	900-518
A INNER CONE - LM 67048	900-519
COMPLETE - A INNER BEARING	900-520
B TYPE BEARINGS	
B OUTER CUP - LM 12710	900-528
B OUTER CONE - LM 12749	900-529
COMPLETE - B OUTER BEARING	900-530
B INNER CUP - L 68110	900-538
B INNER CONE - L 68149	900-539
COMPLETE - B INNER BEARING	900-540
B TYPE PARALLEL BEARINGS	
B PARALLEL OUTER CUP - L 68110	900-538
B PARALLEL OUTER CONE - L 68149	900-539
COMPLETE - B PARALLEL OUTER BEARING	900-540
B PARALLEL INNER CUP - L 68110	900-538
B PARALLEL INNER CONE - L 68149	900-539
COMPLETE - B PARALLEL INNER BEARING	900-540
C TYPE BEARINGS	
C OUTER CUP - L 44610	900-548
C OUTER CONE - L 44649	900-549
COMPLETE - C OUTER BEARING	900-550
C INNER CUP - LM 29710	900-558
C INNER CONE - LM 29749	900-559
COMPLETE - C INNER BEARING	900-560
D TYPE BEARINGS	
D OUTER CUP - LM 67010	900-518
D OUTER CONE - LM 67048	900-519
COMPLETE - D OUTER BEARING	900-520
D INNER CUP - 25520	900-568
D INNER CONE - 25580	900-569
COMPLETE - D INNER BEARING	900-570
E TYPE BEARINGS	
E OUTER CUP - LM 29710	900-558
E OUTER CONE - LM 29749	900-559
COMPLETE - E OUTER BEARING	900-560
COMPLETE - E INNER CUP & CONE - HR 32011 XJ	900-580
COMPLETE - F OUTER CUP & CONE - HR 32011 XJ	900-580
COMPLETE - F INNER CUP & CONE - HR 32012	900-590